
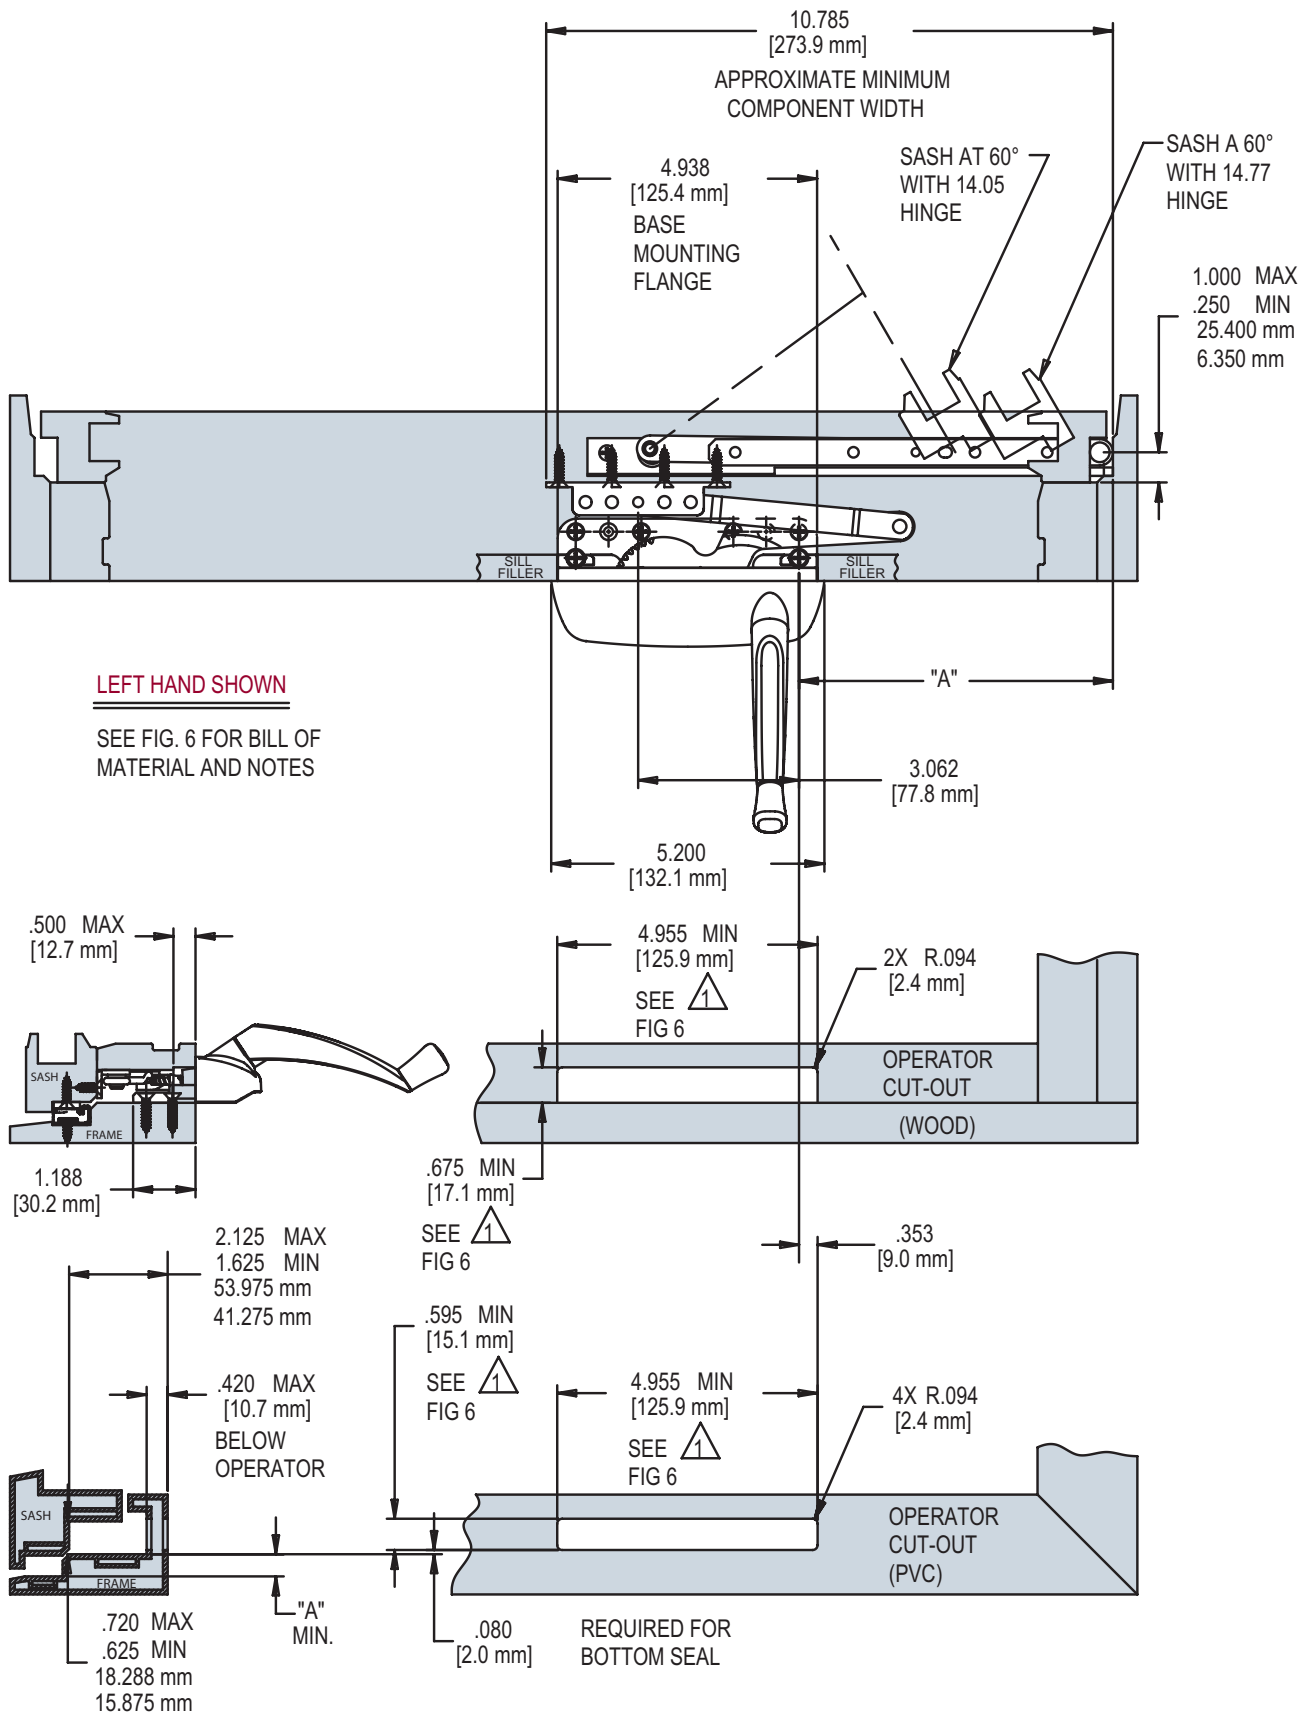


MAXIM® REVERSE DYAD OPERATORS (LOW PROFILE)


FIG. 7 APPLICATION OF MAXIM REVERSE DYAD OPERATOR
(SILL MOUNT VERSION) (LOW PROFILE)



**FIG. 8 APPLICATION OF MAXIM REVERSE DYAD OPERATOR (CONTINUED)
(SILL MOUNT VERSION) (LOW PROFILE)**

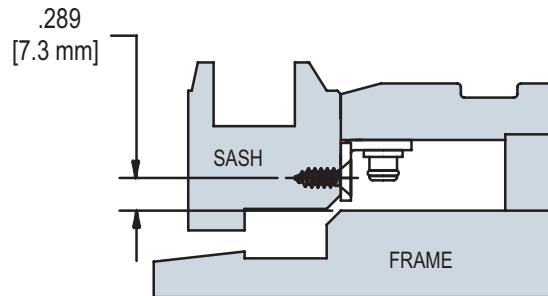

**11674.XX
BRACKET PLACEMENT**

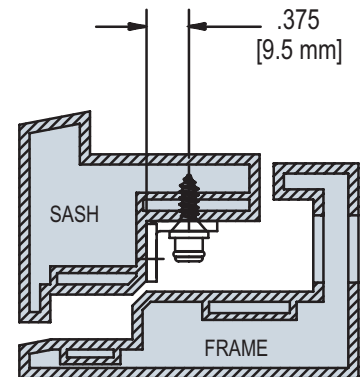

**11674.XX
BRACKET PLACEMENT**

HARDWARE SHOWN FOR LEFT HAND WINDOW, SEE FIG.5	
PART NUMBER	DESCRIPTION
50.71.XX.011	REVERSE DYAD OPERATOR
11674.XX	STUD BRACKET
14.05.00.XXX	HINGE
11454.XX	CONTOUR HANDLE
31882	GASKET (PVC)

HINGE	"A"
14.05.00.XXX	5.973 [151.7 mm]
14.77.00.XXX	5.532 [140.5 mm]

NOTES:


1.  HOLD THIS DIMENSION AS CLOSE TO THE MINIMUM AS MANUFACTURING TOLERANCES ALLOW.
A CLOSE FITTING CUT-OUT HELPS TO STABILIZE THE OPERATOR AGAINST ROCKING.

2. GASKET 32658 IS REQUIRED ON PVC AND METAL PROFILES FOR AN IMPROVED AIR AND WATER SEAL

3. HANDLE/COVER PACK IS OPPOSITE HAND ON ENCORE DYAD OPERATOR. EXAMPLE: LH ENCORE REVERSE DYAD OPERATOR REQUIRES A RH HANDLE/COVER

MAXIM® REVERSE DYAD OPERATORS (LOW PROFILE)

FIG. 9 STANDARD MAXIM REVERSE DYAD OPERATOR
(SILL MOUNT VERSION)
(LOW PROFILE)

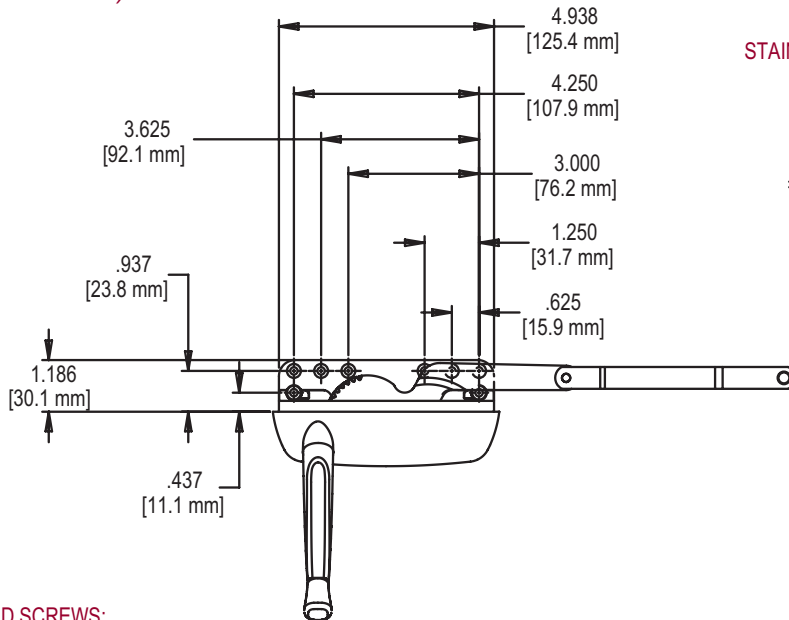

STAINLESS STEEL VERSION AVAILABLE

50.71.XX.011 LEFT HAND SHOWN

RECOMMENDED SCREWS:

(QTY 6)(PN 19240.XX)#8 X 1 FLAT HEAD
SHEET METAL SCREW (SEE TRUTH
TIPS FOR MORE INFORMATION)

(QTY 2)REAR MOUNT:#8-32 X 3/8 PAN HEAD
MACHINE SCREW PN 19545.XX

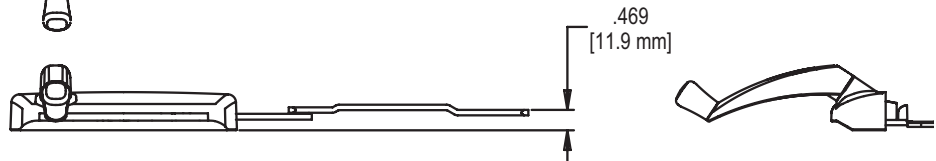


FIG. 10 MAXIM COVER 41212.XX /HANDLE 11329.XX (RH) (SHOWN)


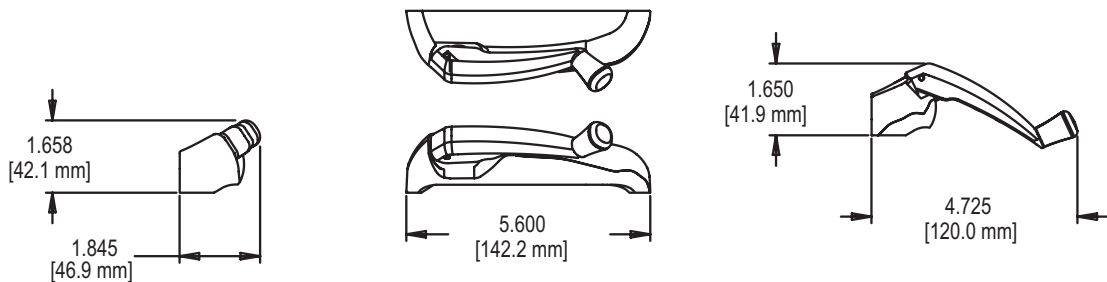


FIG. 11 STUD BRACKET 11661.XX(LH) (SHOWN), 11662.XX(RH)

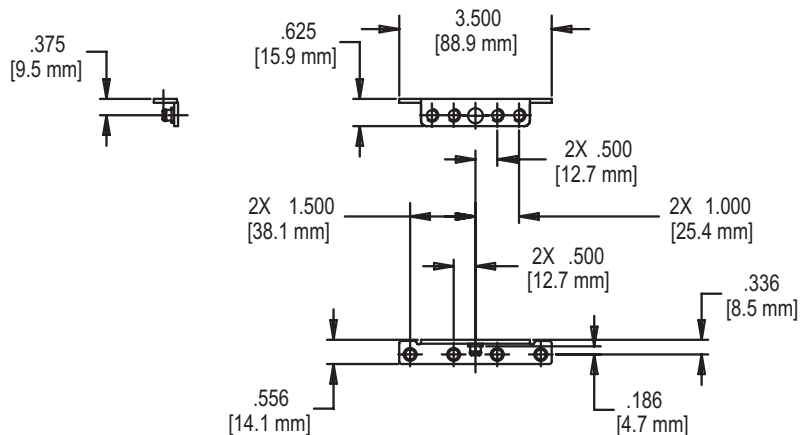

STAINLESS STEEL VERSION AVAILABLE

RECOMMENDED SCREWS:

(QTY 4)(PN 19240.XX)#8 X 1 FLAT HEAD
SHEET METAL SCREW (SEE TRUTH
TIPS FOR MORE INFORMATION)